

Important: Please Keep instructions for future reference. Read instructions thoroughly before assembling and installing.

Stove Top Guard

Adjustable width 50.5 - 96cm (20in - 38in)

Warning: Before starting installation, ensure that the stove and oven are off and at room temperature.

1. Adjust length of Stove Top Guard so it will fit across the length of the stove (A1). Align extension panels with grooves. Secure it into position with the clips (A2).
2. Locate the best position to install the Stove Top Guard.
Note: Install Stove Top Guard with a minimum distance of 4cm (1.5in) from stove burners.
3. Thoroughly clean and dry surfaces where Stove Top Guard is being applied. Ensure no residue remains.
4. With clips fitted into position along the bottom of main section (B), peel off backing from adhesive tapes and press Stove Top Guard firmly into place (C).
5. Hold each clip firmly in place onto the stove while carefully sliding the Stove Top Guard out from clips.
6. After the Stove Top Guard has been removed, apply pressure to clips to ensure that they are firmly in place on the stove top and leave to set.
7. As with most adhesive products, stronger adhesion is achieved by allowing adhesive to set for several hours.

If possible, allow 24 hours for maximum adhesion.

8. After the 24 hours adhesion bonding period, the Stove Top Guard can be repositioned into place (D).
9. If required, Stove Top Guard can be removed when not needed.

To Remove Clips: Ensure that the stove and oven are off and at room temperature. Use rubber cement solvent, eucalyptus oil, or similar type of product. Keep remover out of the reach of children.

To Relocate Product: Replace adhesive tape with 'strong' double sided, heat resistant tape and follow initial installation instructions. Stove Top Guard is also suitable for use on bench tops.


Caution: If using Griller or Broiler, it may be necessary to remove Stove Top Guard before using, or if using the Self Cleaning feature that is available on some lower ovens.

Warning: Never leave children unattended in the kitchen. This product is only a deterrent from children accessing the cook top areas of kitchen stoves. There is no substitute for proper adult supervision.



WARNING - Before starting installation, ensure that the stove and oven are off and at room temperature.

Note: Install Stove Top Guard with a minimum distance of 4cm (1.5in) from stove burners.

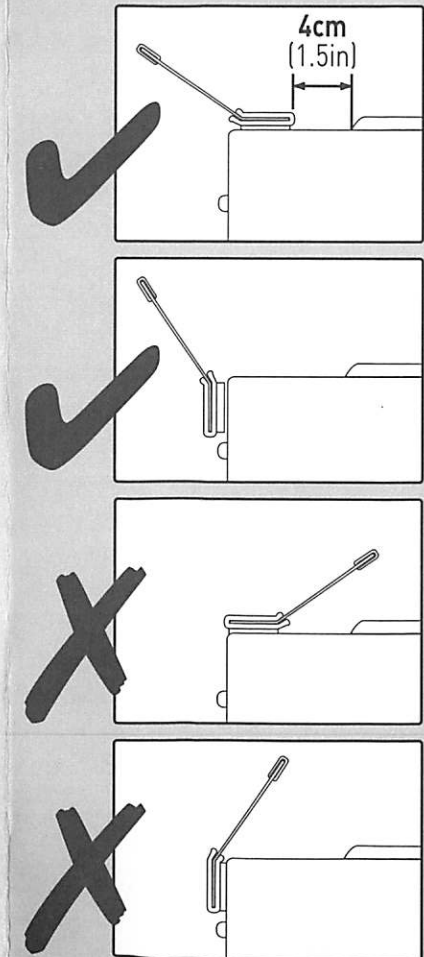

Look for the Dreambaby® range of Child Safety and Care Products.

Tee-Zed acknowledges that its customers may be entitled to statutory consumer guarantees and does not seek to exclude or limit them. These guarantees include that Tee-Zed's products are of acceptable quality. This Tee-Zed product is for the specific purpose detailed in the instructions and packaging and Tee-Zed considers use outside of that purpose to be abnormal use. To the maximum extent permitted by law, Tee-Zed does not accept any liability for damage:

- arising from abnormal use of the products;
- caused by installation or removal of the products other than in accordance with the supplied installation and removal instructions; or
- arising under the law of tort or contract.

Dream Baby® products by Tee-Zed

Made in China

©2012 Tee-Zed Products Pty Ltd



info@tee-zed.com.au

www.dreambaby.co.uk

www.dreambaby.com.au

facebook.com/Dreambabysafety

Tee-Zed Products Pty Ltd, PO Box 2022
Bondi Junction NSW 1355

Australia Tel: (02) 9386 4000

Tee-Zed Products (N.Z.) Ltd, PO Box 64013

Botany Town Centre Auckland

New Zealand Tel: (09) 274 8788

Tee-Zed Products Ltd, PO Box 29227

Dunfermline, KY12 2DN

United Kingdom info@tee-zed.co.uk



F195